

# FOUR-DOOR MOTOR CARS 1980-1989

## Main Menu

- C      Automatic Air Conditioning System
- E      Engine
- F      Propeller Shaft and Universal Joints
- G      Hydraulic and Braking System
- H      Sub-Frame and Suspension
- J      Final Drive
- K&U    Fuel and Exhaust Emission Control
- L      Engine Cooling System
- M      Electrical System
- N      Power Assisted Steering
- Q      Exhaust System
- R      Road Wheels
- S      Body
- T      Transmission

## Alphabetic Menu

# FOUR-DOOR MOTOR CARS 1980-1989

## Alphabetic Menu

### A

ABS ECU wheel sensors & relay (where fitted).....	(Electrical System, Ms31)
Accumulator valve hydraulic system mineral oil .....	(Hydraulic & Braking System, G3)
Aerial, speakers, radio balance control .....	(Electrical System, Ms17)
Air chest valves & fittings .....	(Fuel & Exhaust Emission Control, K&U5)
Air cleaner silencer .....	(Fuel & Exhaust Emission Control, K&U9)
Air fuel meter, fuel injection system.....	(Fuel & Exhaust Emission Control, K&U4)
Air injection system air pump & mounting .....	(Fuel & Exhaust Emission Control, K&U10)
Airdam .....	(Body, S7)
Alternator & regulator.....	(Electrical System, M4)
Alternator mounting.....	(Electrical System, M5)
Alternator mounting.....	(Electrical System, M5)
Assembly looms & link cables .....	(Electrical System, Ms37)
Automatic air conditioning servo assembly .....	(Electrical System, Mc2)
Automatic air conditioning switches, fan speed module & diode board .....	(Electrical System, Mc1)
Automatic air conditioning, air temp sensor, sender & circuit breaker .....	(Electrical System, Mc3)
Automatic choke mounting & hot air pipes .....	(Fuel & Exhaust Emission Control, K&U5)
Automatic speed control .....	(Electrical System, Ms24)

### B

Backlight & fittings.....	(Body, S27)
Backlight & fittings.....	(Body, S28)
Battery tray, battery & cover, cables & switch, ammeter shunt .....	(Electrical System, M1)
Bentley radiator shell & deflector panel .....	(Body, S15)
Blower motor fan ducts & fittings .....	(Automatic Air Conditioning System, C6)
Bonnet & fittings.....	(Body, S10)
Bonnet release mechanism.....	(Body, S11)
Boot lid trim.....	(Body, S61)
Bosch electric fan & mounting .....	(Engine Cooling System, L5)
Bosch, fog lamps.....	(Electrical System, Ms4)
Brake pump hydraulic system mineral oil .....	(Hydraulic & Braking System, G2)

### C

Calipers front brakes .....	(Hydraulic & Braking System, G8)
Calipers rear brakes.....	(Hydraulic & Braking System, G9)
Camshaft thrust plate & valves .....	(Engine, E5)
Canister pipes, hoses & fittings .....	(Fuel & Exhaust Emission Control, K&U11)
Carpets interior .....	(Body, S58)
Cars fitted with Antilock brakes .....	(Sub-Frame & Suspension, H5)
Cars not fitted with Antilock brakes .....	(Sub-Frame & Suspension, H5)
Cassette storage & rear seat .....	(Body, S69)
Cellular telephone & fittings.....	(Electrical System, Ms30)
Cellular telephone only .....	(Body, S60)
Centre console & stowage bin .....	(Body, S47)
Centre division console & switches .....	(Electrical System, Ms21)
Centre stowage bin.....	(Body, S47)
Centre stowage bin.....	(Body, S70)
Cigar lighter .....	(Electrical System, Ms23)
Clips & grommets .....	(Hydraulic & Braking System, G17)
Column cowling.....	(Power Assisted Steering, N2)
Combined windscreen & headlamp wash & control box.....	(Electrical System, Ms11)
Complete body & underframe.....	(Body, S1)

Complete gearbox & mounting adapter.....	(Transmission, T1)
Compressor mounting & thermal fuse.....	(Automatic Air Conditioning System, C2)
Compressor mounting.....	(Automatic Air Conditioning System, C2)
Compressor .....	(Automatic Air Conditioning System, C2)
Condensor accumulator pipes & fittings (ARA).....	(Automatic Air Conditioning System, C1)
Condensor valve in receiver unit pipes & fittings.....	(Automatic Air Conditioning System, C1)
Condensor, valves in receiver unit pipes & fittings .....	(Automatic Air Conditioning System, C1)
Connecting rods & pistons.....	(Engine, E4)
Console facia & trim.....	(Body, S62)
Control box & front accumulator.....	(Transmission, T6)
Coolant pipes, hoses & connections .....	(Engine Cooling System, L3)
Coolant pump, pulley & fan.....	(Engine Cooling System, L2)
Cooling fan delay timer boost limit control unit. spark control unit (ECU).....	(Electrical System, Ms29)
Crankcase covers & sump.....	(Engine, E2)
Crankcase.....	(Engine, E1)
Crankshaft, damper & pulley .....	(Engine, E3)
Cylinder heads .....	(Engine, E6)

## D

Delco Remy alternator mounting.....	(Electrical System, M5)
Delco Remy alternator .....	(Electrical System, M4)
Demister ducts & facia vents .....	(Automatic Air Conditioning System, C9)
Dim dip resistor & relay .....	(Electrical System, Ms2)
Distribution box centre outlet flap & controls .....	(Automatic Air Conditioning System, C8)
Distribution valve & foot pedal lever mounting brackets.....	(Hydraulic & Braking System, G4)
Distribution valve & G-conscious valve .....	(Hydraulic & Braking System, G7)
Distribution valve mechanism .....	(Hydraulic & Braking System, G6)
Drive belts & jockey pulley .....	(Engine, E10)
Drivers door window lift switches .....	(Electrical System, Ms9)
Drop glass & fittings .....	(Body, S63)

## E

Elapsed mileage indicator .....	(Electrical System, Ms27)
Electric window lift & fittings .....	(Body, S66)
Electric window lift.....	(Body, S42)
Electrically operated door mirror .....	(Body, S35)
Electronic control unit & knock sensors .....	(Electrical System, Me5)
Electronic control unit fuel injection system engine run sensor .....	(Electrical System, Me6)
Evaporator expansion valve pipes & fittings (ARA) .....	(Automatic Air Conditioning System, C4)
Evaporator pipes & fittings .....	(Automatic Air Conditioning System, C4)
Evaporator pipes & fittings .....	(Automatic Air Conditioning System, C4)
Exhaust gas recirculation system .....	(Fuel & Exhaust Emission Control, K&U12)
Exhaust manifold & fittings .....	(Exhaust System, Q4)
Exhaust pipes & fittings .....	(Exhaust System, Q1)

## F

Facia board.....	(Body, S45)
Fall tables .....	(Body, S48)
Fall tables .....	(Body, S65)
Fans ducts & recirculation flaps ARA system .....	(Automatic Air Conditioning System, C6)
Fans ducts & recirculation flaps .....	(Automatic Air Conditioning System, C6)
Filters, valves & hoses (engine compartment).....	(Fuel & Exhaust Emission Control, K&U11)
Final drive crossmember & torque arm .....	(Final Drive, J1)
Five box twin system .....	(Exhaust System, Q1)
Five box twin system .....	(Exhaust System, Q1)
Flagstaff mounting .....	(Body, S73)
Flexible hoses & pipes .....	(Hydraulic & Braking System, G15)

Foot operated parking brake centre linkage .....	( <i>Hydraulic &amp; Braking System, G12</i> )
Foot operated parking brake front cable .....	( <i>Hydraulic &amp; Braking System, G13</i> )
Foot operated parking brake mechanism .....	( <i>Hydraulic &amp; Braking System, G11</i> )
Foot pedal lever & pivot .....	( <i>Hydraulic &amp; Braking System, G5</i> )
Forward & direct clutches.....	( <i>Transmission, T7</i> )
Front & rear door solenoid.....	( <i>Electrical System, Ms14</i> )
Front & rear servo, detent solenoid & connector.....	( <i>Transmission, T5</i> )
Front bumper bar .....	( <i>Body, S21</i> )
Front bumper bar .....	( <i>Body, S22</i> )
Front bumper bar .....	( <i>Body, S23</i> )
Front compartment trim .....	( <i>Body, S67</i> )
Front direction indicator & side lamps .....	( <i>Electrical System, Ms5</i> )
Front discs.....	( <i>Sub-Frame &amp; Suspension, H5</i> )
Front door drop glass guidance system.....	( <i>Body, S33</i> )
Front door frame – glass & fittings.....	( <i>Body, S30</i> )
Front door hinges & striker plates .....	( <i>Body, S29</i> )
Front door interior & exterior handles .....	( <i>Body, S32</i> )
Front door interior trim & waistrail finisher .....	( <i>Body, S34</i> )
Front door locking mechanism .....	( <i>Body, S31</i> )
Front fog lamps & front wing flasher .....	( <i>Electrical System, Ms4</i> )
Front seat head restraint .....	( <i>Body, S50</i> )
Front seat mechanism .....	( <i>Body, S51</i> )
Front seat, rake mechanism.....	( <i>Body, S49</i> )
Front seat, squab & cushion.....	( <i>Body, S48</i> )
Front sub-frame & mountings.....	( <i>Sub-Frame &amp; Suspension, H1</i> )
Front suspension axle yoke ball joint & stabiliser .....	( <i>Sub-Frame &amp; Suspension, H4</i> )
Front suspension hub & bearings.....	( <i>Sub-Frame &amp; Suspension, H6</i> )
Front suspension springs & dampers .....	( <i>Sub-Frame &amp; Suspension, H3</i> )
Front suspension upper & lower levers.....	( <i>Sub-Frame &amp; Suspension, H2</i> )
Fuel filter & pipes .....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U2</i> )
Fuel filters & pipes (fuel injection system).....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U2</i> )
Fuel filters, pipes & fittings engine compartment.....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U2</i> )
Fuel pump accumulator pipes & fittings .....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U2</i> )
Fuel pump ballast resistor .....	( <i>Electrical System, Ms28</i> )
Fuel pump .....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U2</i> )
Fuel system & exhaust emission control system fuel tank .....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U1</i> )
Fuel vapour emission control.....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U11</i> )
Fuseboard fittings & relays.....	( <i>Electrical System, M2</i> )

## G

Gear selector .....	( <i>Power Assisted Steering, N3</i> )
Gearbox actuator.....	( <i>Transmission, T11</i> )
Gearbox casing, sump cooling & vacuum modulator.....	( <i>Transmission, T2</i> )
Governor & Speedometer drive .....	( <i>Transmission, T9</i> )
Grass fire shields & exhaust mounting .....	( <i>Exhaust System, Q2</i> )

## H

Half-shaft & detroit joint .....	( <i>Final Drive, J3</i> )
Half-shaft with lobro joint .....	( <i>Final Drive, J3</i> )
Headlamp & dip relay LH European, Canada & Middle East .....	( <i>Electrical System, Ms3</i> )
Headlamp & dip switch .....	( <i>Electrical System, Ms3</i> )
Headlamp & headlamp dip switch RH drive cars .....	( <i>Electrical System, Ms2</i> )
Headlamp ECU & Fuse .....	( <i>Electrical System, Ms2</i> )
Headlamp finisher, wing undersheet & air intake.....	( <i>Body, S12</i> )
Headlamp power wash & timing relay .....	( <i>Electrical System, Ms13</i> )
Headlamp power wash (Bentley).....	( <i>Electrical System, Ms13</i> )
Headlamp power wash (Rolls-Royce) .....	( <i>Electrical System, Ms13</i> )
Headlamp washing.....	( <i>Electrical System, Ms13</i> )

Headlamp wiper mechanism.....	(Electrical System, Ms12)
Headlamps .....	(Electrical System, Ms3)
Heat shields.....	(Engine, E11)
Heater box flaps & fittings.....	(Automatic Air Conditioning System, C7)
Heater, heater tap, pipes & fittings .....	(Automatic Air Conditioning System, C5)
Height control levelling valve.....	(Hydraulic & Braking System, G10)
Hirschmann aerial, speakers, radio balance control & filter .....	(Electrical System, Ms17)
Horns.....	(Electrical System, Ms18)
Hydraulic reservoir, hydraulic system mineral oil.....	(Hydraulic & Braking System, G1)

|

Ignition amplifier & ignition module.....	(Electrical System, Me4)
Ignition coil ballast resistance, ignition leads & spark plugs.....	(Electrical System, Me3)
Ignition distributor .....	(Electrical System, Me2)
Induction manifold cars fitted with fuel injection system.....	(Fuel & Exhaust Emission Control, K&U7)
Induction manifold, cars fitted with S.U. carburetters .....	(Fuel & Exhaust Emission Control, K&U7)
Input shaft & differential .....	(Final Drive, J2)
Input shaft & universal coupling.....	(Power Assisted Steering, N5)
Instrument & warning light cluster .....	(Electrical System, Ms19)
Instrument board mounting bracket .....	(Body, S43)
Instrument .....	(Electrical System, Ms19)
Integral Hella front fog lamp .....	(Electrical System, Ms4)
Intercooler air cleaner .....	(Fuel & Exhaust Emission Control, K&U9)
Interior high mounted stop lamp USA only.....	(Electrical System, Ms7)
Interior high mounted stop lamp.....	(Electrical System, Ms33)
Interior light switches, boot unlock switch .....	(Electrical System, Ms8)
Interior lights.....	(Electrical System, Ms7)
Interior trim BC post & cantrail.....	(Body, S54)
Intermittent wipe & washer level amplifier .....	(Electrical System, Ms11)

L

Labels & identification plates .....	(Body, S12)
LH drive European cars .....	(Electrical System, Ms3)
Low quantity flap, controls & rear compartment air ducts .....	(Automatic Air Conditioning System, C10)
Lower facia panel switches.....	(Electrical System, Ms21)
Lower trim & centre console .....	(Body, S46)
Luggage compartment locking mechanism .....	(Body, S18)
Luggage compartment trim.....	(Body, S60)
Luggage compartment underfelt .....	(Body, S59)

M

Map pockets & footrests .....	(Body, S64)
Merlin aerial.....	(Electrical System, Ms17)
Miscellaneous electrical items .....	(Electrical System, Ms32)
Motorola alternator UE 44732 .....	(Electrical System, M4)
Motorola mounting .....	(Electrical System, M5)
Mouldings .....	(Body, S17)
Mounting brackets & connectors .....	(Hydraulic & Braking System, G16)

O

Oil cooler pipes & fittings.....	(Engine, E12)
Oil filter & fittings .....	(Engine, E8)
Oil filter, breather & fittings .....	(Engine, E9)
Oil pump, pick-up & dipstick .....	(Engine, E7)
Output carrier, reaction carrier, centre support & intermediate clutch .....	(Transmission, T8)
Over speed warning device (120 kph) .....	(Electrical System, Ms27)

## P

Paint & thinners .....	(Body, S72)
Parcel shelf & roof trim .....	(Body, S55)
Parking brake mechanism .....	(Transmission, T10)
Passengers door window lift switches .....	(Electrical System, Ms9)
Passengers front seat head restraint & armrest, cars with telephone .....	(Body, S50)
Passive restraint motor ECU & warning lights .....	(Electrical System, Ms25)
Passive restraint USA only .....	(Body, S48)
Passive restraint .....	(Body, S46)
Petrol filler door solenoid & switch .....	(Electrical System, Ms22)
Pipes hoses & cooler .....	(Power Assisted Steering, N7)
Plenum chamber, valves & pipes fuel injection system .....	(Fuel & Exhaust Emission Control, K&U4)
Propeller shaft & coupling .....	(Propeller Shaft & Universal Joints, F1)
Pump mounting bracket .....	(Power Assisted Steering, N9)
Pump .....	(Transmission, T4)

## R

Rack & pinion steering .....	(Power Assisted Steering, N6)
Radiator matrix & expansion bottle .....	(Engine Cooling System, L1)
Rear bumper .....	(Body, S24)
Rear bumper .....	(Body, S25)
Rear discs .....	(Sub-Frame & Suspension, H10)
Rear door – drop glass guidance system .....	(Body, S40)
Rear door frame – glass & fittings .....	(Body, S37)
Rear door hinges & striker plates .....	(Body, S36)
Rear door interior & exterior handles .....	(Body, S39)
Rear door interior trim & waistrail finisher .....	(Body, S41)
Rear door locking mechanism .....	(Body, S38)
Rear inboard lamps, stop lamp switch, relay stop lamp failure .....	(Electrical System, Ms6)
Rear linkage (RHD & LHD cars) .....	(Hydraulic & Braking System, G14)
Rear mounted aerial & power amplifier .....	(Electrical System, Ms17)
Rear outboard lamps .....	(Electrical System, Ms6)
Rear seat trim .....	(Body, S52)
Rear suspension cross-member & mountings .....	(Sub-Frame & Suspension, H7)
Rear suspension hub & bearings .....	(Sub-Frame & Suspension, H11)
Rear suspension stabilizer .....	(Sub-Frame & Suspension, H12)
Rear window demist timer .....	(Electrical System, Ms26)
Relays .....	(Electrical System, M3)
Rolls-Royce radiator shell & deflector panel .....	(Body, S13)
Rolls-Royce radiator shell with retractable mascot .....	(Body, S14)
Roof trim .....	(Body, S68)

## S

Seat & mirror switches, rear electric window lift inhibit switch .....	(Electrical System, Ms15)
Seat & rear window demister relays .....	(Electrical System, M3)
Seat belts .....	(Body, S56)
Seat switches & memory switch centre console .....	(Electrical System, Ms20)
Service kit .....	(Final Drive, J4)
Shell panels front .....	(Body, S7)
Shell panels, rear wings & petrol filler door .....	(Body, S9)
Shell panels, roof, trunk lid & hinges .....	(Body, S8)
Side frame & outer sill panels .....	(Body, S6)
Sill fittings .....	(Body, S16)
Single catalyst monitor 100 kph speed warning device cars for Japan .....	(Electrical System, Ms27)
Solenoid valves & hoses .....	(Fuel & Exhaust Emission Control, K&U11)
Solex carburetters Assembly RH 9959 .....	(Fuel & Exhaust Emission Control, K&U3)
Soundproofing .....	(Body, S57)

Spare wheel carrier .....	( <i>Body, S20</i> )
Springs & levelling structure .....	( <i>Sub-Frame &amp; Suspension, H9</i> )
Starter motor complete assembly UE 46348.....	( <i>Electrical System, Me1</i> )
Starter motor complete assembly UE 71223.....	( <i>Electrical System, Me1</i> )
Starter motor relay .....	( <i>Electrical System, Me1</i> )
Starter ring, flexible drive plate & torque converter .....	( <i>Transmission, T3</i> )
Steering column switches .....	( <i>Electrical System, Ms16</i> )
Steering column .....	( <i>Power Assisted Steering, N4</i> )
Steering pump .....	( <i>Power Assisted Steering, N9</i> )
Steering wheel & horn button .....	( <i>Power Assisted Steering, N1</i> )
SU carburetter (H1F7) .....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U3</i> )
Sun visors, driving mirror & header trim.....	( <i>Body, S53</i> )
Switch box .....	( <i>Electrical System, Ms1</i> )

## T

Tee piece induction manifold.....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U6</i> )
Terminal & connector Accessories .....	( <i>Electrical System, Ms34</i> )
Terminal & connector Accessories .....	( <i>Electrical System, Ms35</i> )
Terminal & connector Accessories .....	( <i>Electrical System, Ms36</i> )
Thermostat housing & fittings .....	( <i>Engine Cooling System, L4</i> )
Throttle body & fittings (fuel injection) .....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U4</i> )
Throttle control accelerator pedal & pivot LHD cars .....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U8</i> )
Throttle control accelerator pedal & pivot RHD cars .....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U8</i> )
Throttle control engine compartment.....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U8</i> )
Tools .....	( <i>Body, S71</i> )
Top roll & demister panel .....	( <i>Body, S44</i> )
Track rods & side steering levers.....	( <i>Power Assisted Steering, N8</i> )
Trailing arm .....	( <i>Sub-Frame &amp; Suspension, H8</i> )
Transmission (automatic), gearbox actuator & loom assembly RH 2797 .....	( <i>Electrical System, Mt1</i> )
Turbocharger & fittings .....	( <i>Exhaust System, Q5</i> )
Turbocharger, exhaust manifolds & fittings .....	( <i>Exhaust System, Q3</i> )
Twin box system.....	( <i>Exhaust System, Q1</i> )

## U

Under-frame centre .....	( <i>Body, S4</i> )
Underframe dash assembly .....	( <i>Body, S3</i> )
Underframe front .....	( <i>Body, S2</i> )
Under-frame rear.....	( <i>Body, S5</i> )
Undersheet .....	( <i>Body, S19</i> )

## V

Vacuum pump solenoid valve & mounting .....	( <i>Electrical System, Ms24</i> )
Valve in receiver unit UD 22494 .....	( <i>Automatic Air Conditioning System, C3</i> )
Valves, pipes & hoses air injection system.....	( <i>Fuel &amp; Exhaust Emission Control, K&amp;U10</i> )

## W

Warning lights centre console switches & cigar lighter.....	( <i>Electrical System, Ms19</i> )
Wheels road wheels, fittings & wheel trims .....	( <i>Road Wheels, R1</i> )
Windscreen & fittings .....	( <i>Body, S26</i> )
Windscreen washer & control box.....	( <i>Electrical System, Ms11</i> )
Windscreen wiper mechanism & switches .....	( <i>Electrical System, Ms10</i> )