

SECTION N.

Bentley Continental 'R' Type
As for Bentley 'R' except

<u>GROUP N.1.</u>	<u>Continental</u>	<u>Qty</u>	<u>Standard</u>	<u>Qty</u>	
BOLT,.312" dia., stay to dash (RC)	K.314/Z	3	K.308/Z	1	
BOLT,.312" dia., stay to dash (LC)	K.308/Z	3	K.308/Z	1	
NUT, .312" dia., support bracket stay (RC)	K.4313/Z	7	K.4313/Z	4	
NUT, .312" dia., support bracket stay (LC)	K.4313/Z	7	K.4313/Z	5	
MOUNTING, seal (LC)	RF.8268	1	RF.6995	1	Q
PLATE, anti-fume cover (RC)	RF.10153	1	RF.6834	1	
PLATE, anti-fume cover (LC)	RF.7115	1	RF.6488	1	Q
PLATE, anti-fume cover (LC)	RF.8216	1			=
SEAL, rubber,anti-fume seal (RC)	RF.10154	1	RF.6835	1	
SEAL, rubber,anti-fume seal (LC)	RF.8217	1			=
STAY,assy,horizontal,col:to dash (RC)	RF.10289	1	RF.8473	1	
STAY,inner, column to dash (RC)	RF.10283	1			
STAY,outer, column to dash (RC)	RF.10284	1			
STAY,assy,horizontal,col:to dash (LC)	RF.10287	1	RF.10548	1	
STAY,inner, column to dash (LC)	RF.10282	1			
STAY,outer, column to dash (LC)	RF.10285	1			
TUBE, outer, assembly (LC)	RF.6697	1			=
TUBE, outer assembly (RC)	RF.7351	1			* "
TUBE, outer assembly (RC)	RF.10303	1			
TUBE, riding control assy	RF.3428	1	RF.9818	1	=
TUBE, riding control assy (LC)	RF.6496	1	RF.9818	1	
TUBE, riding control assy (RC)	RF.5012	1			* "
TUBE, riding control assy (RC)	RF.10301	1			
TUBE, stationary assy (RC)	RF.3431	1	RF.9826	1	
TUBE, stationary assy (LC)	RF.6493	1	RF.9824	1	
TUBE, stationary assy (RC)	RF.5016	1			* "
TUBE, stationary assy (RC)	RF.10297	1			

GROUP N.1 (Continued)

	<u>Continental Qty</u>		<u>Standard Qty</u>		
TUBE, steering cam assy (RC)	RF.9953	1	RF.3402	1	=
TUBE, steering cam assy (RC)	RF.9896	1	RF.3402	1	*
TUBE, steering cam assy (RC)	RF.10294	1	RF.3402	1	"
TUBE, throttle control assy (RC)	RF.3437	1			
TUBE, throttle control assy (LC)	RF.3437	1			=
TUBE, throttle control assy (LC)	RF.6940	1			Q
TUBE, throttle control assy (RC)	RF.5014	1			*
TUBE, throttle control assy (RC)	RF.10299	1			"
WASHER, dashboard, seal mounting (LC)	RF.7116	1	RF.6456	1	Q
WASHER, plain, .312" dia., support stay (LC)	K.4410/z	3	K.4410/Z	1	
WASHER, spring, .312" dia., support bracket stay (RC)	K.9009/Z	7	K.9009/Z	5	

NOTES: * When 2" longer steering column is required
 " When 1½" shorter steering column is required
 = With centre gear change on LC
 Q With column gear change on LC

GROUP N.1A

BOLT, .312 dia., stay to dashboard	K.314/Z	3	K.308/Z	1
COVER, anti-fume seal, dashboard	RF.10090	1	RF.9794	1
NUT, .312 dia., stay to dashboard	K.4313/Z	3	K.4313/Z	1
PLATE, anti-fume seal	RF.10091	1	RF.9310	1
STAY, assy, column to dash, horizontal (RC)	RF.10289	1	RF.8473	1
STAY, column to dash, inner (RC)	RF.10283	1		
STAY, column to dash, outer (RC)	RF.10284	1		
STAY, assy, column to dash, horizontal (LC)	RF.10287	1	RF.8473	1
STAY, column to dash, inner (LC)	RF.10282	1		
STAY, column to dash, outer (LC)	RF.10285	1		
TUBE, outer assy (RC)	RF.9918	1		
TUBE, outer assy (LC)	RF.9835	1		
TUBE, riding control (RC)	RF.9820	1		
TUBE, riding control (LC)	RF.9818	1		
TUBE, stationary assy	RF.9824	1		
TUBE, steering cam assy (RC)	RF.9585	1		
TUBE, steering cam assy (LC)	RF.6498	1		

GROUP N.1A (Continued)

	<u>Continental</u>	<u>Qty</u>	<u>Standard</u>	<u>Qty</u>
WASHER, Spring, stay to dashboard	K.9009/Z	3	K.9009/Z	1

GROUP N.3

COVER, coiled pipe	RF.6142	1	FW.1334	1	=
LEVER, pendulum	RF.7406	1	RF.4898	1	=
PIPE, oil assy	RF.8333	1	RF.8236	1	=

NOTES: = LC with centre gear change

GROUP N.5

BRACKET, mounting steering box (LC)	RF.7093	1			=
BRACKET, mounting steering box (RC)	RF.10152	1	RF.7398	1	
BRACKET, throttle control (LC)	RF.8249	1			
BOX, steering assy (RC)	RF.5265A	1	RF.5265A	1	
Stud,.250 dia., rocking shaft cover (LH)	KB.752/Z	3	KB.752/Z	5	
Stud,.250 dia., rocking shaft cover (LH)	KB.756/Z	2			
BOX, steering assy (LC)	RF.6098A	1	RF.5265	1	=
Stud, 5BA, heat shield	RF.7859	3			
NUT, 5BA, heat shield	K.4301/Z	3			=
SHIELD, heat	RF.6360	2			=
WASHER, Grover, 5BA, heat shield	K.4503/Z	9			=

NOTE: = (LC) with centre gear change

GROUP N.7


TUBE, side assy (RC)	RF.7767	1	RF.5306	1
TUBE, side assy (LC)	RF.8316	1	RF.7409	1

GROUP N.8


INSULATOR, cable	RF.3421	1	RF.3421	R
INSULATOR, cable (auto gear box)	RF.10061			S

The following parts are additional:-



BOLT, 3BA, mixture control lever	K.3630/Z	1	
BOLT, 2BA, mixture control lever	K.133/Z	1	
CUP, control lever spring, throttle	F.588671	2	
HOLDER, spring, mixture control with pedestal F.58670	F.88730A	1	
LEVER, lower assy, throttle control with ball pin RE.3527	RE.9668	1	
LEVER, quadrant mixture control assy with	RF.5003A	1	
Knob	RF.8401	1	
Rivet .187" dia., countersunk	KB.12123	1	
Tooth	F.87738	1	
PIN, control lever spring	G.77718	1	
QUADRANT, control with insert (this replaces RF.9369)	RF.6542	1	
SCREW, countersunk head, spring holder	F.58672	3	
SPRING, control lever	FB.42	1	

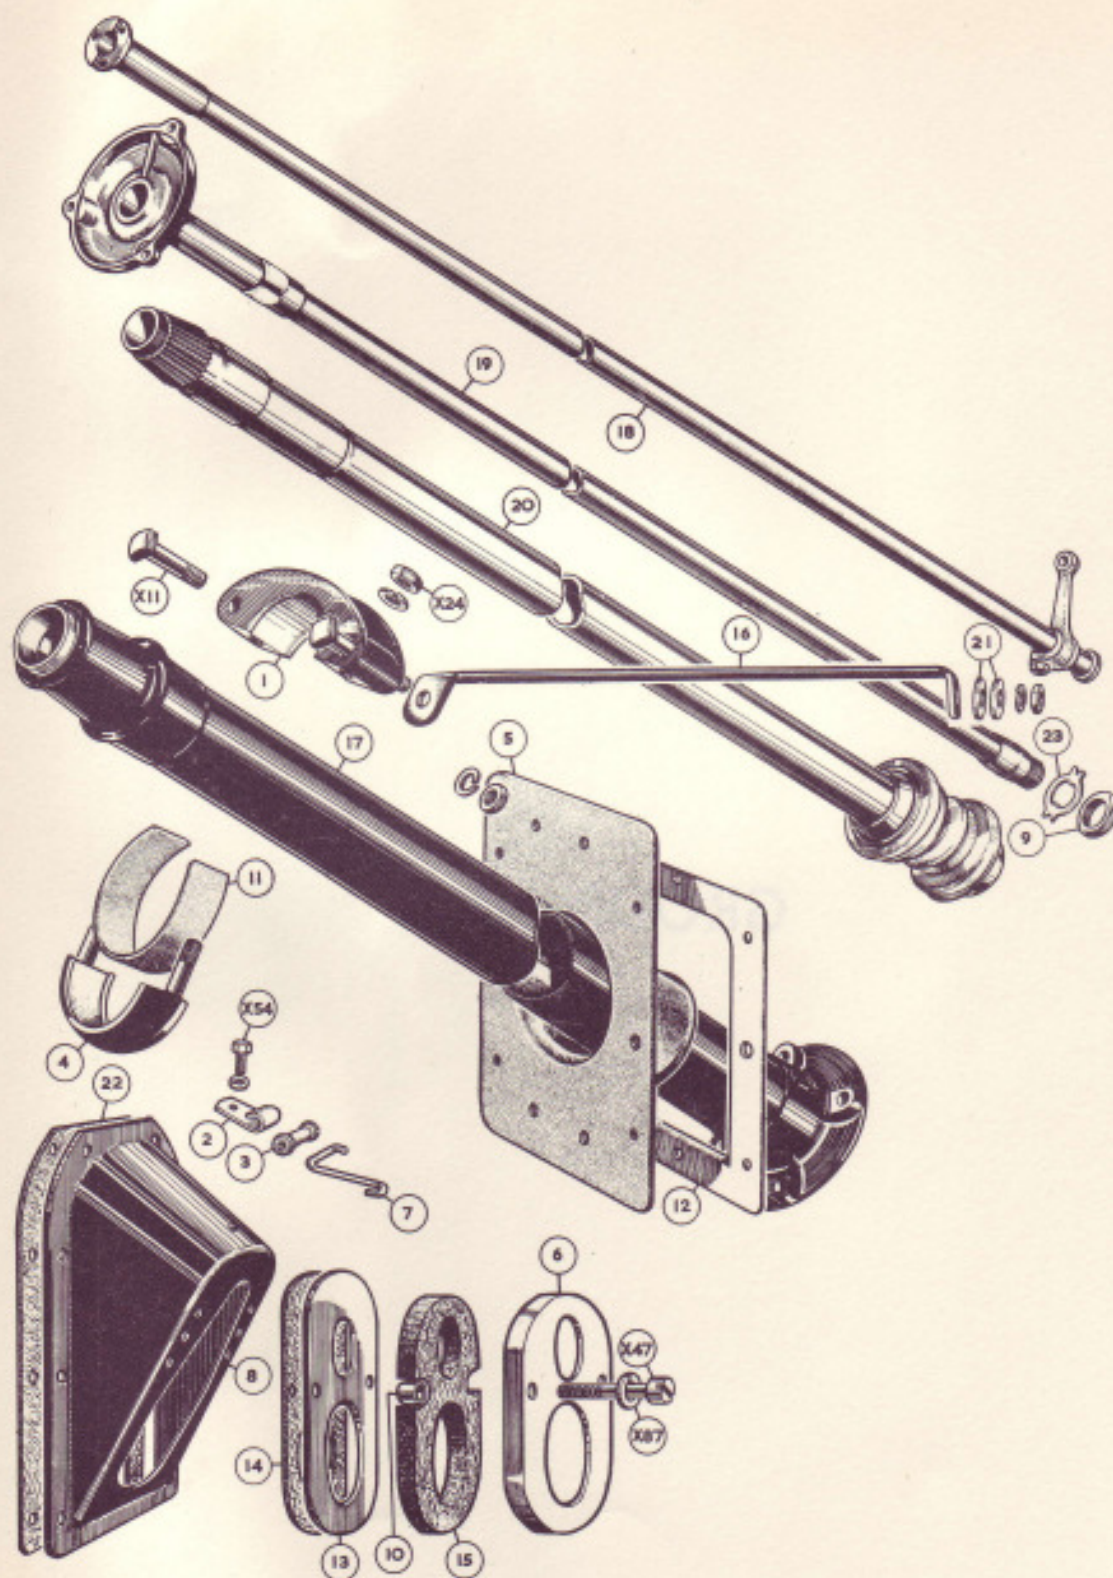


GROUP NI

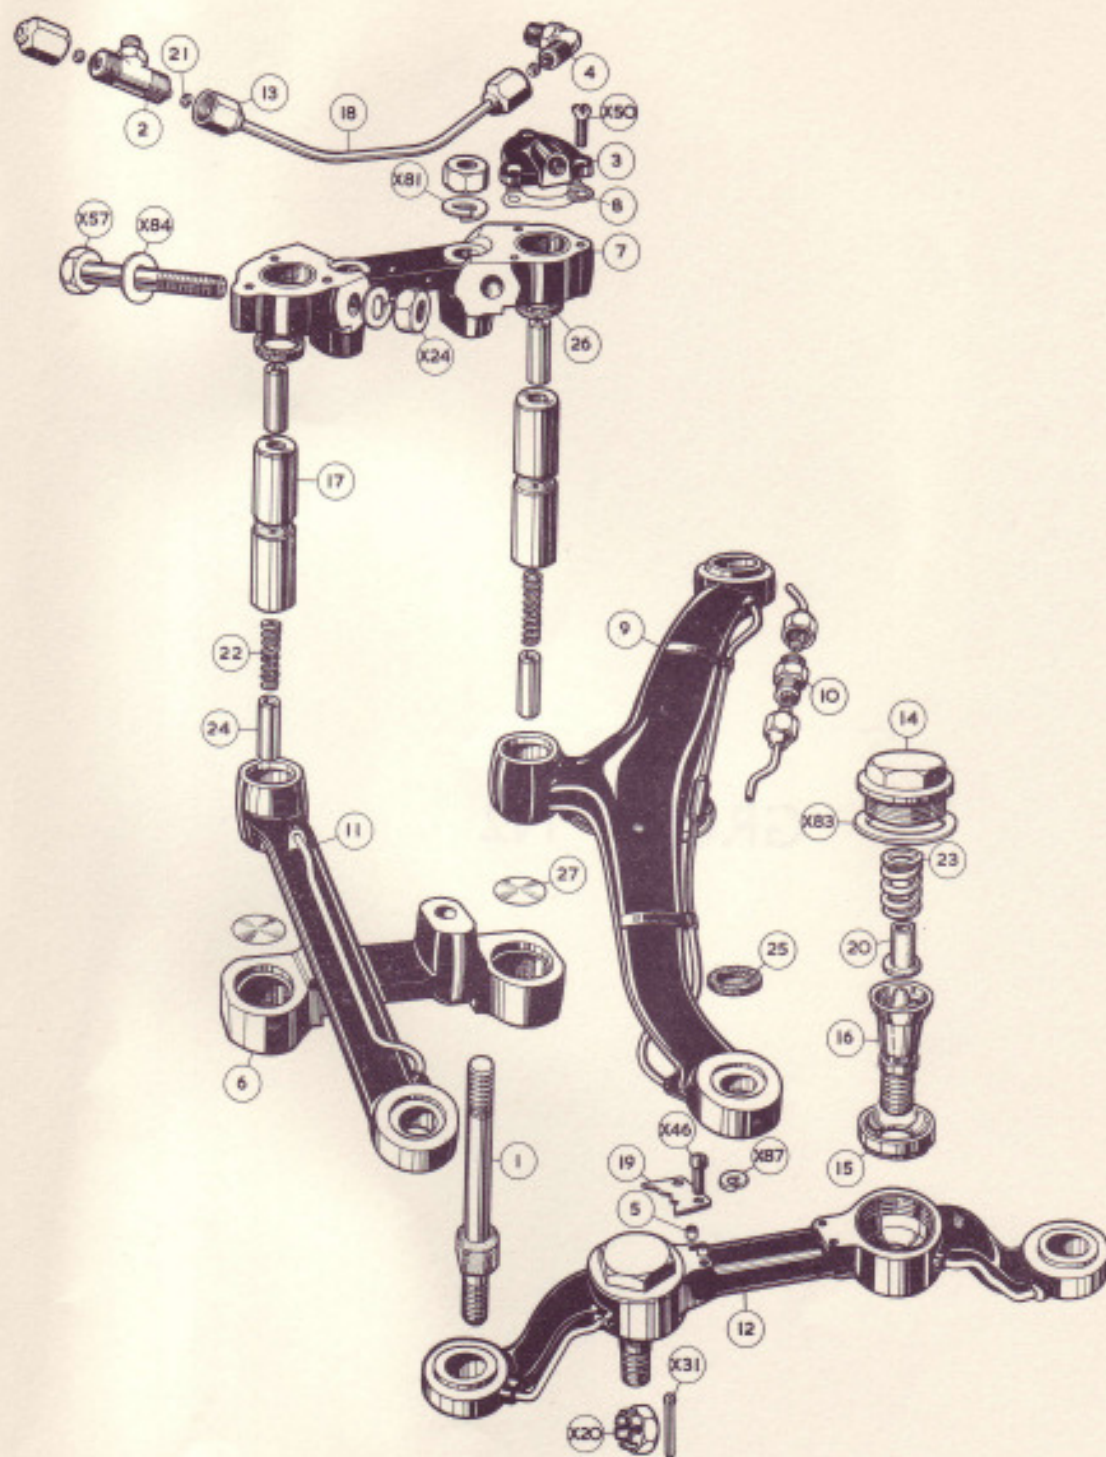


GROUP N2

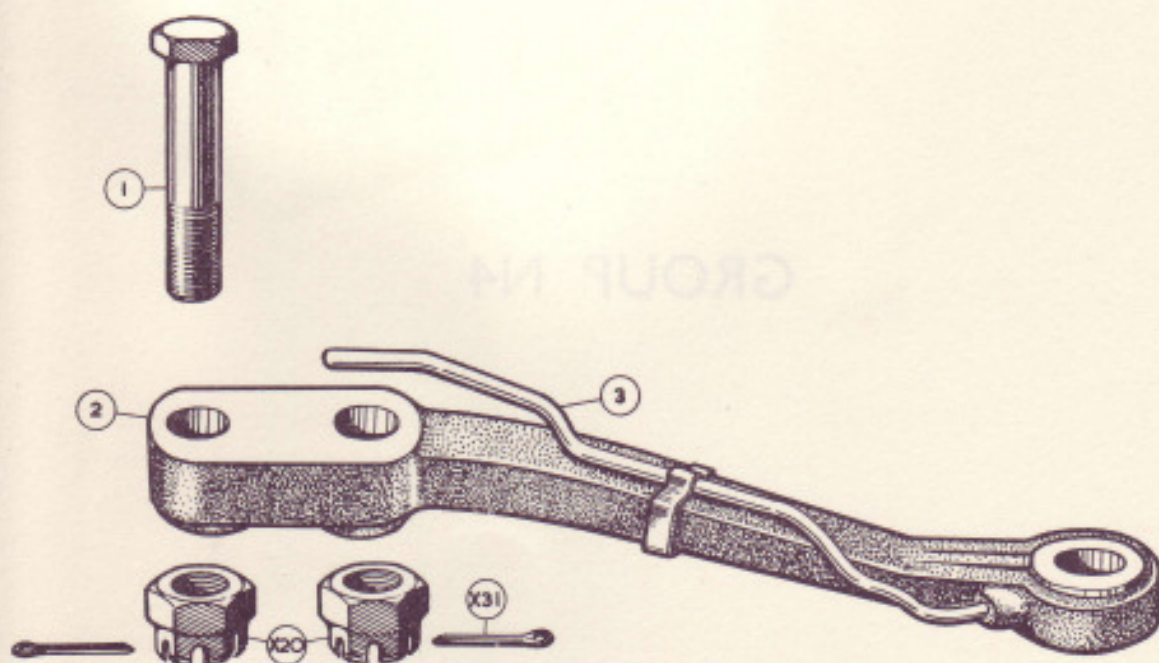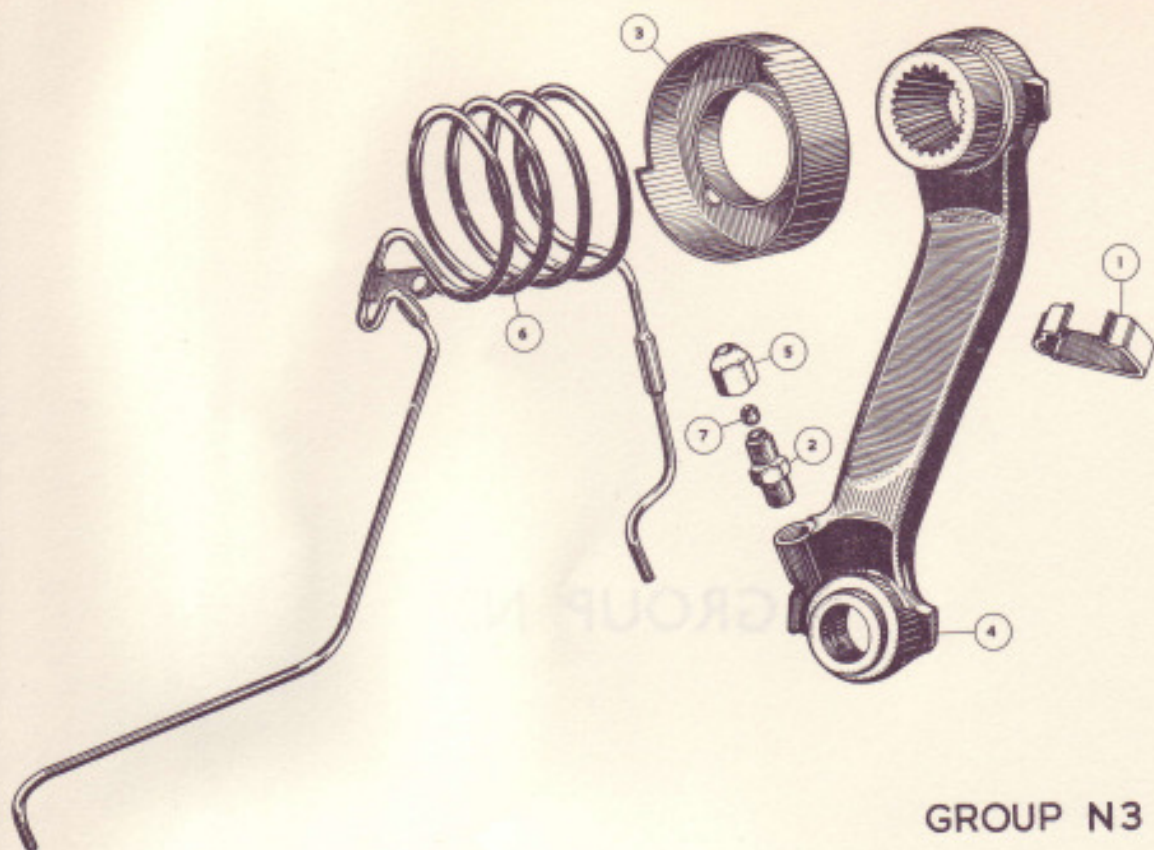


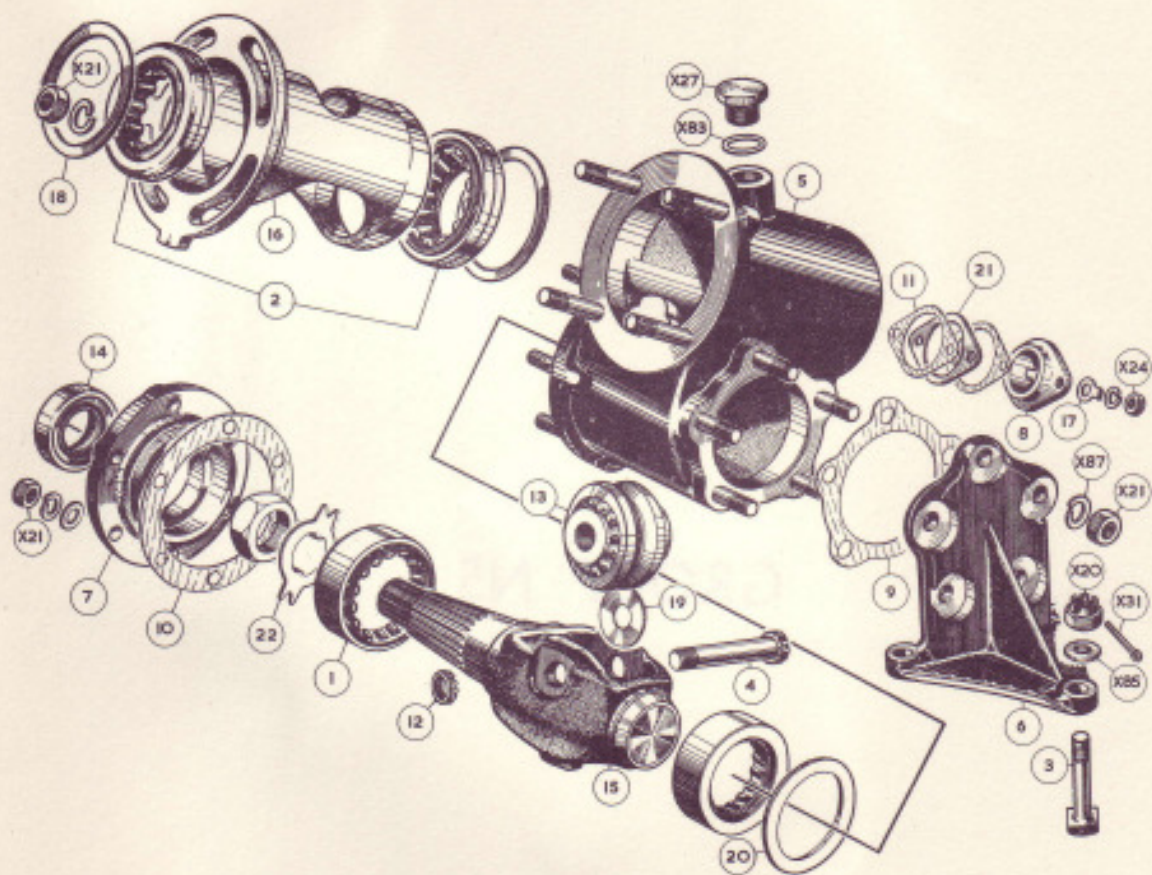


GROUP N5

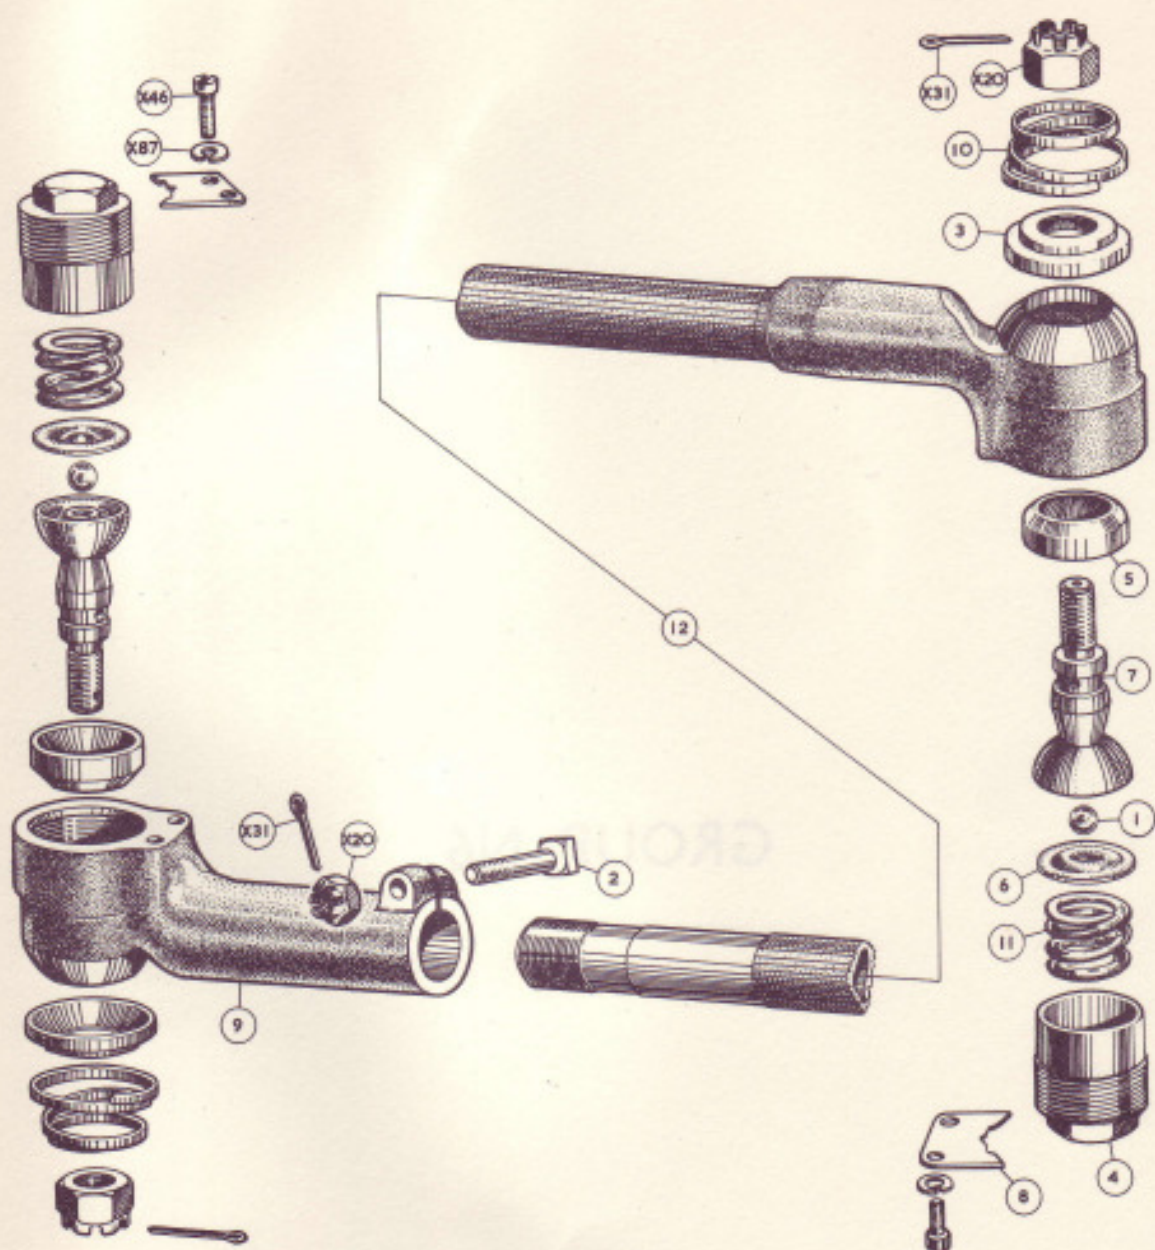

GROUP N6

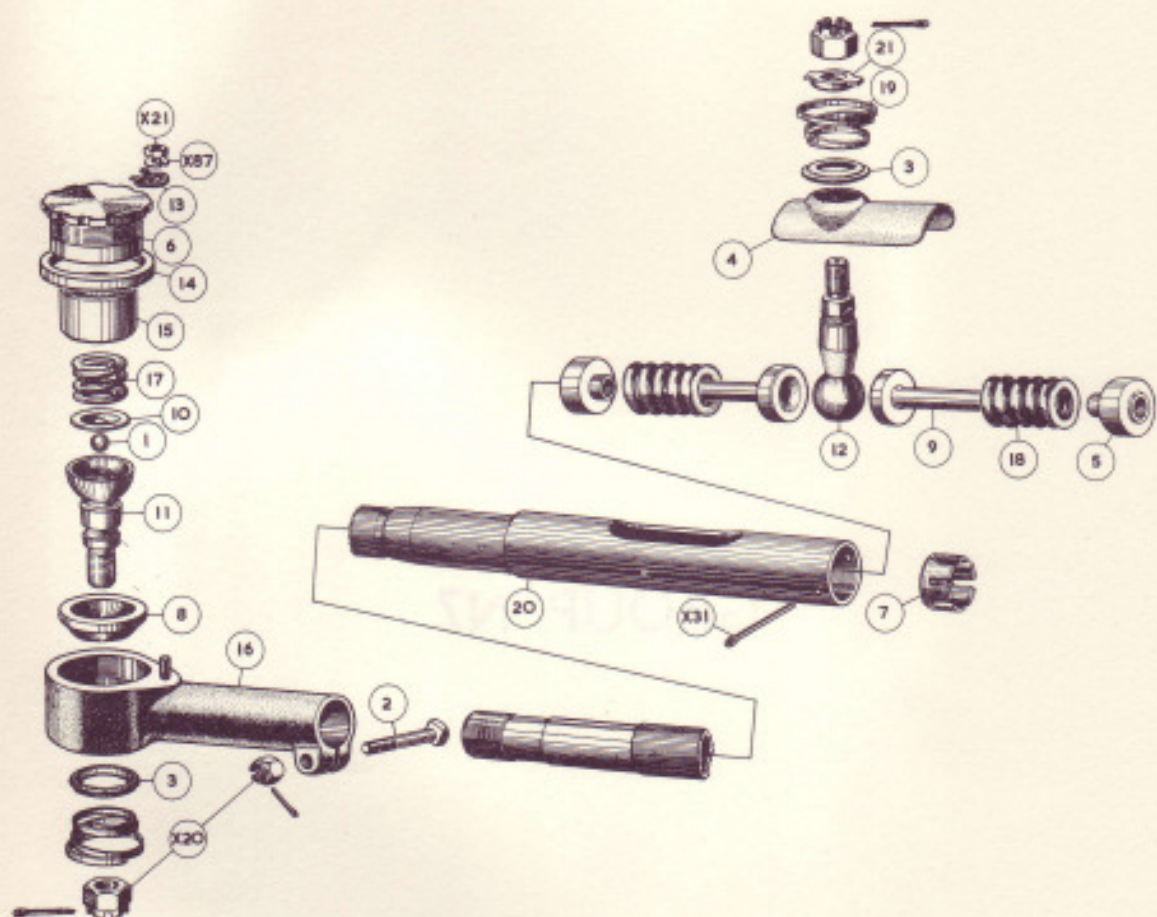

GROUP N7

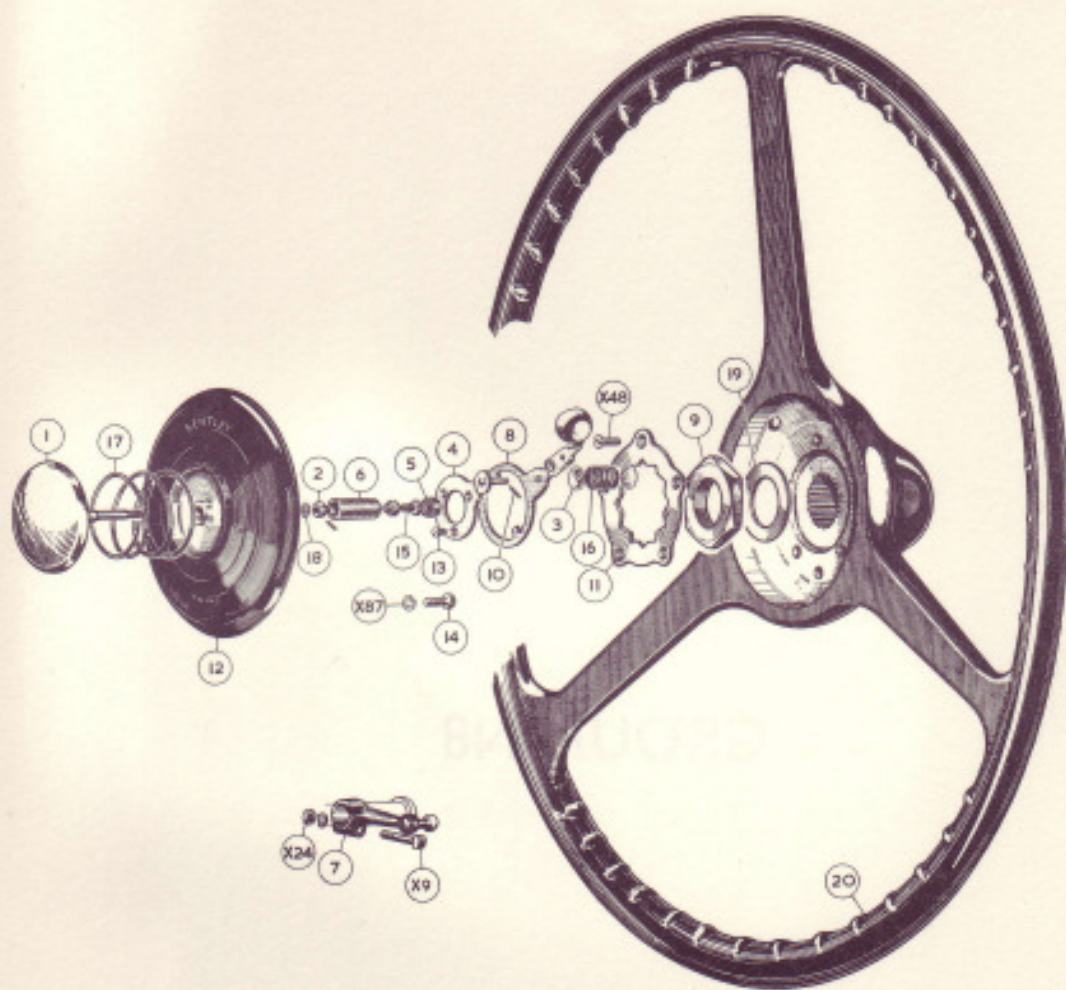

GROUP N8