

# Index to Illustrations.

	Fig.	Page
Air Pump for Petrol System ... ..	70	89
Air Valve of Carburettor ... ..	43	41
Axle Spring and Bracket ... ..	7	19
Battery Ignition Diagram ... ..	68	75
Brake Adjustment, Foot ... ..	53	52
“ “ , Rear ... ..	54	53
“ Compensating Mechanism, Rear ...	28, 29	31
“ Foot ... ..	26	30
“ Rear ... ..	38	38
Carburettor Air Valve ... ..	43	41
“ Dismantled ... ..	42, 43	41
“ Float Chamber ... ..	56	55
Chassis, Plan of ... ..	1	4
Clutch Brake ... ..	67	74
“ Coupling ... ..	2	17
“ Draining ... ..	63	71
“ Lubrication of ... ..	62	70
“ Mechanism ... ..	25	29
“ Valve Actuation ... ..	64	72
“ “ Dismantled ... ..	65	72
“ “ in Position ... ..	66	73
Coil Trembler ... ..	46	45
Commutator, Battery ... ..	19	25
Compensating, Mechanism for rear Brake	28, 29	31
Control Connections ... ..	20, 24	26, 29
“ on Steering Wheel ... ..	17	24
Distributor, Battery ... ..	30	32
“ Dismantled Battery ... ..	31	32
“ of Magneto ... ..	45	43
Engine Lubrication ... ..	58	65
“ Supports ... ..	39	39
Extra Oil Filter ... ..	49	47
Fan ... ..	18	25
Filling Petrol Tank ... ..	57	57
Float Chamber ... ..	56	55
Foot Brake ... ..	26	30
“ “ Adjustment ... ..	53	52
Front Axle and Hub ... ..	50	48
“ “ Pivots ... ..	13, 14	22, 23
Front Springs with Clip Bolt Removed ...	40	39
“ “ with leaves separated ... ..	41	40
Hand Levers ... ..	27	30
Hub, Rear ... ..	72	94
Ignition Diagram, Battery ... ..	68	75

	Fig.	Page
Ignition Diagram, Magneto ... ..	69	76
Lubrication System of Engine ... ..	58	65
Magneto ... ..	21, 22	27
“ Brake ... ..	23	28
“ High-Tension Distributor ... ..	45	45
“ Ignition Diagram ... ..	69	76
Make and Break, Battery ... ..	32, 44	33, 42
Oil Filter, extra ... ..	49	47
“ Pump Dismantled ... ..	60	67
“ “ Inverted View of ... ..	61	68
“ “ on Engine ... ..	59	66
“ Well and Filter ... ..	35	36
Pedal Mechanism ... ..	25	29
Petrol System, Plan of ... ..	71	91
“ Tank, Filling ... ..	57	57
Plugs, Barnacled ... ..	33	35
“ Clean ... ..	34	35
Priming Oil Pumps ... ..	36	37
Propeller Shaft Universal Joints ... ..	47, 48	46
Pump for Petrol System, Air ... ..	70	89
Radiator Water Level ... ..	37	37
Radius Rod Adjustment ... ..	55	54
“ “ Front End ... ..	5	18
“ “ Rear End ... ..	6	19
Rear Brake Adjustment ... ..	54	53
“ Brakes ... ..	38	38
“ Hub ... ..	72	94
Shock Absorber in Position on Frame ...	73	101
“ “ arrangement ... ..	74, 75	102, 103
Side Levers ... ..	27	30
Sparkling Plugs, Barnacled ... ..	33	35
“ Clean ... ..	34	35
Spring Bracket on Axle ... ..	7	19
“ Lubricators ... ..	8 to 11	20, 21
Springs with Clip Bolt removed, Front ...	40	39
“ with Leaves separated, Front ... ..	41	40
Starting Handle, position when starting Engine	51	50
“ “ ... ..	12	22
Steering Box ... ..	16	24
“ Rod, Cross ... ..	15	23
“ Wheel and Control ... ..	17	24
Swivels on Front Axle ... ..	13, 14	22, 23
Tappet Adjustment ... ..	52	51
Torque Rod, Front End ... ..	3	17
“ Rear End ... ..	4	18
Trembler for Battery ... ..	46	45
Universal joint on Propeller Shaft ... ..	47, 48	46
Water Level in Radiator ... ..	37	37