



HANDBOOK
OF THE
20/25 H.P.
ROLLS-ROYCE CAR

WITH INSTRUCTIONS FOR RUNNING
AND MAINTENANCE

NUMBERS XII and XIV.

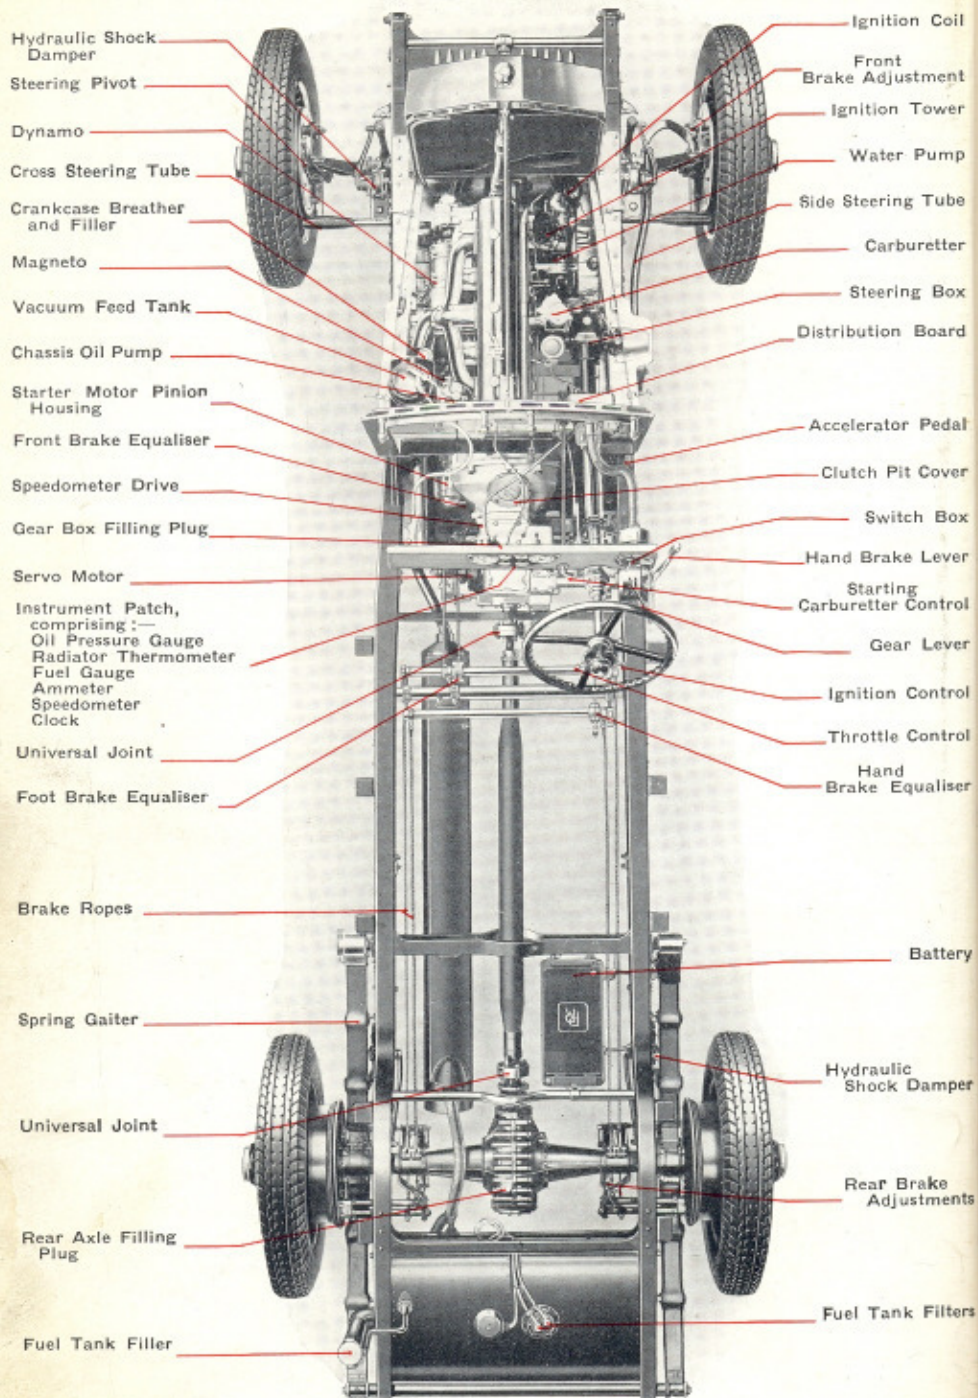


FIG. 1. PLAN VIEW OF CHASSIS.

HANDBOOK
OF THE
20/25 H.P.
ROLLS-ROYCE CAR
WITH INSTRUCTIONS FOR RUNNING
AND MAINTENANCE

Liable to Alteration without Notice

Numbers XII and XIV.

PRICE 15/-

Published by
ROLLS-ROYCE LIMITED
DERBY; AND 14 AND 15, CONDUIT STREET, LONDON

(Copyright)
(Printed August, 1938.)

THE information contained in this book is divided into two main portions, namely, that included in the Chapters of the Handbook, and that under the heading, "Instructions for Running and Maintenance".

The Chapters of the Handbook provide explanations of the working of each unit or component of the Chassis and include detailed directions for lubrication and adjustment.

Under "Instructions for Running and Maintenance" are included all essential driving and upkeep instructions. The Maintenance notes are a repetition in condensed form of the periodic lubrication and adjustments included in the Handbook, and are classified under periods and mileages. Numerous references to the Handbook are provided whereby any particular instruction may be amplified if required.

Owners and chauffeurs should therefore familiarise themselves with the Instructions for Running and Maintenance in order to operate the car successfully, referring to the remainder of the book at leisure or if necessary.

In connection with certain proprietary components, viz., the battery, wheels and tyres, and the fuel level indicator, separate instructions approved by the makers of these articles will be found incorporated as pamphlets at the end of the book.

A set of special spanners and tools is supplied with the chassis. It is most desirable that these should be used when effecting any adjustment, as otherwise vital parts may be seriously damaged.

The records of our Maintenance Department show that complaints regarding operation of Rolls-Royce cars are generally due to lack of familiarity with the instructions contained in the instruction books.

It is strongly recommended that this book be carefully studied, and the instructions faithfully followed, to ensure the greatest satisfaction.

ROLLS-ROYCE LIMITED

London Office and Showroom :

14 & 15, Conduit Street, London, W.1

TELEGRAMS: "ROLHEAD, PICCY, LONDON."

TELEPHONE: MAYFAIR 6201 (7 LINES).

CODES USED: A B C (5TH EDITION), BENTLEY'S, MARCONI,
MOTOR TRADE, WESTERN UNION.

London Repair Depôt :

Claremont Road, Cricklewood, N.W.2

TELEGRAMS: "SILVAGOST, CRICKLE, LONDON."

TELEPHONES: GLADSTONE 4222-3-4-5.

Registered Office and Works - - - DERBY

TELEGRAMS: "ROYCAR, DERBY."

TELEPHONE: DERBY 2424 (6 LINES).

Paris Service Depôt :

Franco-Britannic Autos Ltd., 25, Rue Gide, Levallois, Paris

TELEGRAMS: "FRANCOBRIT-LEVALLOIS-PERRET-FRANCE."

TELEPHONE: PEREIRE 31-04 AND 38-88.

CONTENTS.

	PAGE
THE ROLLS-ROYCE SYSTEM OF PERIODIC INSPECTION	16
THE SECRET OF SUCCESSFUL RUNNING	17
LEADING PARTICULARS OF CHASSIS	18

HANDBOOK OF THE CHASSIS.

CHAPTER I.—CENTRALISED CHASSIS LUBRICATION SYSTEM ...	21
General—Foot-operated Oil Pump—Drip Plugs—Front Axle System—Use of Foot-operated Oil Pump—Use of Hand-operated Oil Gun.	
CHAPTER II.—ENGINE LUBRICATION SYSTEM — REMOVAL OF CYLINDER HEAD	27
Crankshaft—Connecting Rods—Oil Pump and Relief Valve—Valve Rockers, Push Rods and Tappets—Camshaft—Oil Sump Strainer—Oil Level Indicator—Oil Pressure—Dismantling Oil Pump and Relief Valve—Removal of Cylinder Head for Decarbonising—Removing Rocker Cover and Shaft—Removing Exhaust and Inlet Manifolds—Removing Cylinder Head—Cleaning Pistons and Head—Grinding in the Valves—Replacing Cylinder Head—Reassembling—Adjusting Tappets.	
CHAPTER III.—FUEL FEED SYSTEM AND CARBURATION ...	42
The Fuel System—Action of Vacuum Feed—Failure of Supply—Fuel Strainers and Filter—Fuel Tank—Fuel Gauge—Action of the Carburetter—Cleaning the Air Valve—Faulty Adjustment of Carburetter—Setting of the Jets—Mixture Control—Slow Running—Starting Carburetter—Float Feed Mechanism—Crankcase Breather Pipe to Carburetter—Dismantling the Carburetter.	
CHAPTER IV.—CARE AND ADJUSTMENT OF THE FOUR-WHEEL BRAKES	60
General Description—Possible Variations—Adjustments—Adjustment of Rear Brakes—Adjustment of Front Brakes—Adjustment of the Servo—Lubrication—Oil on Brakes—Use and Abuse of the Brakes.	

Contents—continued.

	PAGE
CHAPTER V.—CLUTCH, GEARBOX, PROPELLER SHAFT, AND REAR AXLE	74
Clutch Adjustments—Lubrication of Clutch Mechanism—Gearbox—Universal Joints—Rear Axle.	
CHAPTER VI.—STEERING, SHOCK DAMPERS, AND ROAD SPRINGS	80
Steering Column and Box—Steering Arms and Joints—Steering Pivots—Hydraulic Shock Dampers—Shock Damper Connections—Road Springs.	
CHAPTER VII.—WATER COOLING SYSTEM	87
Water Pump—Overheating—Radiator Shutters—Radiator Mounting—Water Level in Radiator—Mascots—Frost and Anti-freeze Mixtures—Fan.	
CHAPTER VIII.—ELECTRIC LIGHTING, STARTING, AND IGNITION SYSTEMS	94
General—Dynamo—Distribution Box—Switchbox—Ammeter—Battery and Connections—Battery Ignition—Magneto Ignition—Firing Order of Cylinders—Spark Plugs—Electric Horn—Electric Fuel Gauge—Addition of Electrical Apparatus—Starter Motor—Starter Motor Switch—Use of Starter Motor—Battery Discharge—Charging in Garage from External Source—Electrical Fault Location—Recommended Lamp Bulbs.	

INSTRUCTIONS FOR RUNNING AND MAINTENANCE.

SECTION I.—STARTING THE ENGINE AND DRIVING THE CAR ...	117
Starting the Engine—Fuel Feed—Fuel Gauge—Running the Car—Gear Changing—Use of Charging Switch—Ignition Switch—Use of Magneto—Automatic Control of Radiator Shutters—Overheating—Slow Running—Water Level in Radiator—Frost—Use of the Brakes—Fitting of Chains.	
SECTION II.—PERIODIC LUBRICATION AND ATTENTION ...	126
Lubricants Recommended.	
SECTION III.—STORAGE AND RECOMMISSIONING OF CARS ...	134
SECTION IV.—ROLLS-ROYCE SCHOOL OF INSTRUCTION ...	136
MAP SHOWING LOCATION OF ROLLS-ROYCE LONDON SERVICE AND REPAIR DEPÔT	137

INDEX.

	PAGE
Acid in Battery, Inspection of	128
Adjustment of Battery Contact Breaker	103, 132
Adjustment of Carburetter	52
Adjustment of Fan Belt	93, 130
Adjustment of Front Brakes	66
Adjustment of Hand Brakes	64
Adjustment of Rear Brakes	64
Adjustment of Ignition Plugs	108, 132
Adjustment of Magneto Contact Breaker... ..	106
Adjustment of Servo Motor... ..	68, 131
Adjustment of Starting Carburetter	56
Adjustment of Tappet Clearance	40, 130
Air Lock in Oil Pipes	33
Ammeter	101
Anti-Freeze Mixture	91
Axle, Lubrication of Rear	78, 131, 133
Battery, Care of	112
Battery, Charging in garage from external source	112
Battery Connections	102
Battery Discharge	112
Battery Ignition	103
Battery Ignition, L.T. Contact Breaker Adjustment	103, 132
Battery Ignition, H.T. Distributor, Cleaning	105
Belt, Adjustment of Fan	93, 130
Belt, Removal of Fan	93
Bonnet, Removing	127
Bonnet, Ventilators	89, 123
Brakes, Adjustment of Front	66
Brakes, Adjustment of Hand	64
Brakes, Adjustment of Rear	64
Brakes, Dragging	68, 70
Brakes, Oil on	63, 71
Brake, Shoes, Re-covering	66, 68
Brakes, Use and Abuse of	71, 124
Brushes, Dynamo	97, 132

	PAGE
Brushes, Motor	109, 132
Brushes, Oil on Dynamo or Motor	96, 109
Camshaft	30
Carbon in Cylinders, Removal of	37
Carburetter, Action of	49
Carburetter, Adjusting	52
Carburetter Air Valve, Cleaning	52, 132
Carburetter, Dismantling	58
Carburetter Float Mechanism	57, 132
Carburetter, Starting	56, 118
Centralised Chassis Lubrication	21
Chains on Road Wheels	73, 125
Changing Gear	120
Charging Battery from External Source	112
Charging Switch, Use of	121
Chassis, Leading Particulars of	18
Chassis Lubrication, Centralised	21
Chromium Finish, Cleaning	127
Clutch Adjustments	74
Clutch Spigot, Bearing, Lubrication of	75, 131
Cold Weather, Water System in	91, 124
Condenser of Contact Breaker	103
Connecting Rods	29
Contact Breaker, Battery Ignition... ..	103, 129, 131, 132
Control Mechanism, Lubrication of	129
Crank Chamber, Filling Engine	32, 128, 130
Crankshaft	27
Cut-out, Automatic	97
Cylinders, Firing Order of	108
Cylinder Head, Removal of	34
Cylinder Head, Tightening Bolts of	36, 41
Dampers, Hydraulic Shock	81, 133
Decarbonising	34
Distribution Box	97
Distributor, Ignition	105, 119
Dragging Brakes	68, 70
Draining Engine Crankcase	31, 128, 130, 132
Draining Water System	91, 132
Drip Plugs	23
Drivers' School of Instruction	136
Dynamo	95
Dynamo Bearings	96, 129
Dynamo Brushes	97, 132
Dynamo Connections... ..	96

	PAGE
Earth Connection of Battery	34, 95
Economical Driving	55
Electric Fuel Gauge	108, 114, 120
Electric Horn	108
Electric Lighting, Starting and Ignition System	94
Electrical Apparatus, Addition of	108
Electrical Fault Location	113
Electrolyte, Inspection of	128
Engine Lubrication, Causes of Failure of	32
Engine Lubrication System	27
Engine, Quantity of Oil in	32, 128
Engine, Starting the	118
Exhaust Fumes in Garage, Danger of	59
Exhaust and Inlet Manifolds	35, 39
Fan Bearing, Oiling	93, 131
Fan Belt Adjustment	93
Fan Belt, Removing	93
Field Fuse	99, 113
Filler Plug, Gearbox	76
Filling Rear Axle Casing	79
Filling Crank Chamber	32, 128
Filter, Cleaning Dashboard Fuel	46, 128
Firing Order of Cylinders	108
Float Mechanism, Carburetter	57, 132
Front Brake Adjustment	66
Frost, Precautions during	91, 124
Fuel, Failure of Supply of	45
Fuel Feed System, Vacuum	42, 119
Fuel Filter on Dashboard	46, 128
Fuel Gauge	49, 120
Fuel Strainers, Cleaning	46, 132
Fuel Tank Strainers	47, 132
Fuse Wire, Gauge of	99
Fuses, Failure of	113
Fuses, Replacing	97, 99
Fuses, Spare	99
Gearbox	76, 131, 133
Gear Changing	120
Gear Oil Recommended	126
Glycerine in Water System	91, 124
Grease, Recommended Ball Bearing	126
Horn, Electric	108
Hydraulic Shock Dampers	81, 133
Ignition, Battery	103

	PAGE
Ignition Coil	103, 105
Ignition Control	120
Ignition, Magneto	106, 122
Ignition Plugs	108, 132
Ignition, Re-setting Battery	105
Ignition Switch	100, 112, 122
Inlet and Exhaust Manifolds	35, 39
Jets, Adjustment of Carburetter	52
Joints, Universal	76, 129
Lamp Bulbs, Recommended	114
Leads, Colour of Dynamo	96
Lighting, Electric	94
Lubricating Oils and Greases Recommended	126
Lubrication, Centralised Chassis	21
Lubrication, Engine	27, 128, 130
Lubrication, Gearbox	76, 131, 133
Lubrication, Periodic... ..	128
Lubrication, Rear Axle	79, 131, 133
Lubrication with Oil Gun	26
Magneto, Use of	106, 122
Mascots... ..	91
Missing Fire	53, 105, 114
Mixture Control	55
Motor, Servo	68, 133
Motor, Starter... ..	109
Oil on Brake Coverings	63, 71
Oil, Filling Crank Chamber with	32, 128, 130
Oil Gun, Use of	26
Oil in Engine, Quantity of	32, 128
Oil in Gearbox and Back Axle	76, 79, 131, 133
Oil Level Indicator, Engine	32
Oil Pressure, Failure of	32
Oil Pressure Required	32, 119
Oil Pump, and Relief Valve	29
Oil Pump and Relief Valve, Dismantling	33
Oil Pump, Chassis	21, 25
Oils Recommended for R.R. Cars	126
Oil Strainer, Cleaning of Engine	30, 128, 132
Oil System, Engine	27
Overheating	88, 124
Pistons, Cleaning	37
Pivots, Steering	23, 81
Plugs, Standard Settings for	108, 132
Propeller Shaft Sliding Joint	77, 129

	PAGE
Pump, Engine Oil	29, 33
Pump, Gland of Water	87
Pump, Water	87, 129
Radiator, Draining	90, 124, 128, 132
Radiator, Mounting	90
Radiator Shutters, Automatic	88, 123
Radiator, Water Level in	90, 124, 128, 132
Relief Valve for Oil Pump	29, 33
Road Springs, Lubrication of	85
Rocker Cover	35
Rocker Shaft	35
Rockers, Valve	29, 39
Servo Motor, Action of	60
Servo Motor, Adjustment of	68, 133
Shock Dampers, Hydraulic	81, 133
Shutters, Radiator	88, 123
Slow Running	55, 124
Snow, Use of Chains for Driving on	73, 125
Spark Gaps, Standard	108, 132
Spring Clips, Attention to	86
Spring Shackles, Lubrication of	85
Springs, Road	85
Starter Motor	109
Starter Motor Bearings	109, 129
Starter Motor Brushes	109, 132
Starter Motor Connections	110
Starter Motor, Failure of Operation of	114
Starter Motor Lubrication	109, 129
Starter Motor Switch	110, 130
Starter Motor, Use of	110
Starting Carburetter	56, 118
Starting, Difficult	119
Starting the Engine	118
Steering Box, Oiling	80, 129
Steering Column	80
Steering Gear, Adjustment and Examination	80, 132
Steering Joints	80
Steering Pivots	81
Stopping the Car	72
Storage of Car	134
Strainer, Chassis Oil Pump	22
Strainer, Engine Oil	30, 128, 132
Strainers, Fuel	46, 132
Supplementary Air Valve (Carburetter)	52, 130

	PAGE
Switch, Automatic	99
Switchbox	100
Switch, Charging, Use of	121
Switch, Ignition	100, 112, 122
Switch, Starter Motor	110, 130
Tank, Service Fuel, Refilling	45
Tappets, Adjustment of	40, 130
Temperature of Circulating Water... ..	88, 123
Thermometer, Water Temperature	89, 123
Thermostat	88
Universal Joints	76, 129
Vacuum Fuel Feed	42, 119
Valve Grinding	38
Valve Guides	38
Valve Push Rods	29, 39
Valve Rockers	29, 39
Valve Tappet Adjustment	40, 130
Valve Tappets	29, 40
Ventilators, Bonnet	89, 123, 131
Ventilation of Garage	59
Water Level in Radiator	90, 124, 128
Water Pump Gland	87
Water Pump Lubrication	87, 129
Water System, Draining	90, 124, 128, 132
Water Temperature	88, 123
Weight of Chassis	18

INDEX OF ILLUSTRATIONS.

	FIG. No.	PAGE No.
Adjusting the Tappets	11	40
Axle Casing, Oil Plugs in	24	78
Axle, Front, Strainers and Non-return Valves on	4	24
Belt, Fan, Adjustment	29	92
Box, Distribution, with Cover Removed, and Ballast Resistance	33	98
Brakes, Adjustment of Front Wheel	20	67
Brakes, Adjustment of Rear Wheel	19	65
Brake System, Diagram of	18	61
Carburetter	16	50
Carburetter, with certain parts Dismantled	17	51
Chassis Lubrication System, Diagram of	2	21
Chassis Oil Pump	3	22
Chassis, Plan	1	2
Clutch, Part Sectional View of	22	75
Coil, Ignition, and Distributor	34	104
Cylinder Head Removed for Decarbonising	9	36
Damper, Front Shock	25	82
Damper, Rear Shock	26	83
Diagram of Rolls-Royce Four-Wheel Brake System	18	61
Diagrams, Electrical Wiring	30, 31	95
Distribution Box with Cover Removed, and Ballast Resistance	33	98
Dynamo	32	95
Engine Lubrication System	5	28
Fan Belt Adjustment	29	92
Filter, Dashboard Fuel, dismantled	13	46
Front Wheel Brake Adjustment	20	67
Fuel Filter, Dashboard, dismantled	13	46
Fuel Tank Strainers	14	47
Fuel Tank, showing Filler, Strainers and Level Indicator	15	49
Gear Lever Gate, Perspective View of	37	121
Head, Cylinder, removed for Decarbonising	9	36
Hydraulic Shock Dampers, Front	25	82
" " " Rear	26	83
Ignition Coil and Distributor	34	104
Lubrication System, Chassis	2	21
Lubrication System, Engine	5	28
Magneto	35	106