

HANDBOOK
FOR
BENTLEY
CONTINENTAL SPORTS
SALOON
(WITH AUTOMATIC GEARBOX)
WITH INSTRUCTIONS FOR RUNNING
AND MAINTENANCE

Liable to Alteration without Notice

Number XV

PRICE £1. 5. 0

Published by
BENTLEY MOTORS (1931) LTD.
DERBY, CREWE
AND 16 CONDUIT STREET, W.I.

THE information contained in this book has been arranged to facilitate reference, by condensing all essential driving and upkeep instructions in the first two chapters. Numerous references to other parts are provided, whereby any particular instruction may be amplified if required.

Subsequent chapters include explanations of the working of the various units or components of the chassis, and include detailed directions for lubrication and maintenance.

Owners and drivers should, therefore, familiarise themselves with the first two chapters in order to operate the car successfully, referring to the remainder of the book at leisure, or if necessary.

A set of special spanners and tools is supplied with the chassis. It is most desirable that these should be used when effecting any adjustment, as otherwise vital parts may be seriously damaged.

It is strongly recommended that this book be carefully studied, and the instructions faithfully followed, to ensure the greatest satisfaction.

BENTLEY MOTORS (1931) LIMITED

Directors:

Dr. F. Llewellyn Smith

R. N. Dorey, O.B.E.

R. F. Messervy

D. R. McDonald

J. E. Scott

London Office and Showroom:

14 and 15 Conduit Street, London W.1

TELEGRAMS: "BENSPORT, PICCY, LONDON"

TELEPHONE MAYFAIR 4412 (3 LINES)

CODES USED: A B C (5TH EDITION), BENTLEY'S, MARCONI,

MOTOR TRADE, WESTERN UNION

Main Service Station:

Hythe Road, Willesden, London N.W.10

TELEGRAMS: "BENSERDEP, WESPHONE, LONDON"

TELEPHONE: LADBROKE 2444

Crewe Repair Depot:

Pym's Lane, Crewe, Cheshire

TELEGRAMS: "BENSPORT, CREWE"

TELEPHONE: CREWE 3271

Works - - - CREWE

Cheshire, England

TELEGRAMS: "BENSPORT, CREWE"

TELEPHONE: CREWE 3271 (10 LINES)

Authorised Paris Service Station:

Franco-Britannic Autos Ltd.

25 Rue Paul Vaillant Couturier, Levallois, Seine

TELEGRAMS: "FRANCOBRIT-LEVALLOIS-PERRETT-FRANCE"

TELEPHONE: PEREIRE 60-24

CONTENTS

	PAGE
CHAPTER I.—STARTING THE ENGINE AND DRIVING THE CAR ...	21
Starting the Engine—Use of Starting Handle—Automatic Gear Changing—Tow Starting—Fuel Feed—Fuel Gauge—Chassis Lubrication—Controllable Shock Dampers—Battery Charging—Lighting Control and Switch—Accessories—Radiator Thermostat and Thermometer—Coolant Level in Radiator—Frost—Snow Tyres—Fitting of Snow Chains.	
CHAPTER II.—PERIODIC LUBRICATION AND ATTENTION ...	29
Lubricants Recommended—Capacities—Points for Regular Attention according to Use of Car—Adjusting Valve Rocker Clearances.	
CHAPTER III.—CENTRALISED CHASSIS LUBRICATION ...	37
General—Foot-operated Oil Pump—Drip Plugs.	
CHAPTER IV.—ENGINE LUBRICATION SYSTEM ...	41
Filling the System—Oil Pump—Oil Filter—Crankshaft and Connecting Rods—Relief Valves—Valve Rockers, Push Rods and Tappets—Camshaft—Oil Sump—Oil Level Indicator—Oil Pressure—Oil Temperature.	
CHAPTER V.—THE FUEL SYSTEM ...	47
The Fuel System—Fuel Pumps—Faulty Operation of Pumps—Fuel Tank—Fuel Filters—Fuel Gauge—The Carburetters (Action)—Carburetter Adjustment—Air Cleaners.	
CHAPTER VI.—THE BRAKING SYSTEM ...	59
General Description—Right-hand Model—Left-hand Model—Possible Variations—Adjustments—Adjustment of Hand Brake—Adjustment of Servo—Lubrication—Bleeding the Hydraulic System—Hydraulic Master Cylinder.	
CHAPTER VII.—GEARBOX, PROPELLER SHAFT AND REAR AXLE	67
Gearbox—Universal Joints—Rear Axle.	
CHAPTER VIII.—STEERING, SHOCK DAMPERS, ROAD SPRINGS, WHEELS AND TYRES ...	71
Steering Box and Column—Steering—Front Suspension—Warning, Front Suspension Springs—Steering Arms and Joints—Front Stabiliser—Rear Hydraulic Shock Dampers—Rear Road Springs—Wheels—Wheel Discs—Lubrication of Wheel Bearings—Tyres—The Jacking System—Wheel Changing—Fitting and Removing Tyres—Inflation of Tyres—Balancing Road Wheels.	

Contents—continued.

	PAGE
CHAPTER IX.—ENGINE COOLING SYSTEM	83
Coolant—Coolant Pump and Fan—Fan Belt Adjustment—Overheating—Radiator Thermostat—Radiator Mounting—Coolant Level—Frost and Anti-freeze Mixtures—Car Heater.	
CHAPTER X.—THE ELECTRICAL SYSTEM	89
General—Dynamo—Fuse Box—Output Regulator and Cut-out—Switchbox—Ammeter—Battery and Connections—Ignition—Ignition Coil—Ignition Timing—Firing Order of Cylinders—Sparking Plugs—Starter Motor—Starter Motor Switch Micro-switch—Use of Starter Motor—Electric Fuel Pumps and Gauge—Electric Horns—De-misting—Direction Indicators—Headlamps—Replacing a Headlamp Bulb—Aligning the Headlamps—Side Lamps—Electrical Fault Location.	
CHAPTER XI.—ACCESSORIES	107
Windscreen Washing Equipment.	
CHAPTER XII.—STORAGE AND RECOMMISSIONING OF CARS ...	109
CHAPTER XIII.—BENTLEY SCHOOL OF INSTRUCTION	III

INDEX

	PAGE
Acid in Battery, Inspection of	32, 98
Adjustment of Contact Breakers	97
Adjustment of Carburetter	55
Adjustment of Fan Belt	84
Adjustment of Brakes	32, 63
Adjustment of Hand Brake	64
Adjustment of Ignition Plugs	33, 99
Adjustment of Servo Motor	64
Adjustment of Valve Rockers	35
Air Silencer and Cleaner	32, 35, 55
Aligning the Headlamps	104
Ammeter	94
Anti-freeze Mixtures	26, 86
Automatic Air Valve, Carburetter	30, 51
Axle, Lubrication of Rear	30, 33, 36, 69
Axle, Oil Capacity of Rear	30
Battery, Care of	96
Battery, Charging	24, 95
Battery, Topping up	32, 94
Belt, Adjustment of Fan	84
Brakes, Adjustment of	32, 63
Brake, Adjustment of Hand	64
Brushes, Dynamo	34, 90
Brushes, Motor	99
Camshaft	44
Carburetter, Action of	50

	PAGE
Carburetter, Adjustment	55
Carburetter, Automatic Air Valve... ..	30, 51
Carburetter, Float Feed Mechanism	54
Carburetter, Needle Valve	52
Centralised Chassis Lubrication	37
Chains on Road Wheels	27
Changing Gear	22
Changing a Wheel	26
Chassis, Leading Particulars of	17
Chassis Lubrication, Centralised	37
Coil, Ignition	97
Cold Weather, Water in Cooling System... ..	26, 86
Condenser of Contact Breaker	97
Connecting Rods	43
Contact Breaker	96
Control Mechanism, Lubrication of	33
Coolant Level in Radiator	26, 31, 85
Coolant Mixture	86
Coolant Temperature... ..	26, 84
Crankshaft	43
Cut-out, Automatic	91
Cylinders, Firing Order of	99
Dampers, Hydraulic Shock	24, 30, 34, 72, 74
Dampers, Governor for Hydraulic Shock... ..	75
De-froster and De-mister, Operating	25, 101
Direction Indicators	102
Distributor, Ignition	96
Draining Engine Crankcase	33
Draining Cooling System	26, 86
Drip Plugs	39
Dynamo	34, 90
Dynamo Brushes	34, 90
Dynamo Connections... ..	90
Dynamo Output Regulator	91
Earth Connection of Battery	89
Electric Fuel Gauge	24, 45, 101
Electric Horns	101
Electric Lighting, Starting and Ignition System	89
Electrical Fault Location	104
Electrolyte, Inspection of	32, 94

	PAGE
Engine Cooling System, Capacity	30
Engine Lubrication System	41
Engine, Quantity of Oil in	30
Engine, Starting the	21
Exhaust Fumes in Garage, Danger of	56
Fan, Engine Cooling	83
Fan Belt Adjustment	84
Filler Plug, Gearbox	67
Filling Rear Axle Casing	30, 33, 36, 69
Filter, Engine Oil	42
Filter, Cleaning Fuel	36, 49
Firing Order of Cylinders	99
Float Feed Mechanism, Carburetter	54
Frost, Precautions during	26, 86
Fuel, Failure of Supply of	48
Fuel Feed System	23, 47
Fuel Gauge	24, 45, 101
Fuel Pumps	48, 101
Fuel Filters	36, 49
Fuel Tank	49
Fuse Box	91
Fuse Wire	91
Fuses, Failure of	104
Fuses, Replacing	91
Fuses, Spare	91
Gearbox	29, 32, 36, 67
Gearbox, Oil for	29
Gearbox, Oil Capacity of	30
Gear Changing	22
Glycol in Cooling System	26, 83
Governor Controlling Hydraulic Shock Dampers	75
Greases, Recommended	29
Headlamps	102
Headlamps, Alignment	104
Headlamps, Replacing Bulb	104
Heater, Car	87
Horns, Electric	101
Hubs, Wheel	76
Hydraulic Brakes, Bleeding	65
Hydraulic Shock Dampers	24, 30, 34, 72, 74

	PAGE
Hydraulic Master Cylinder	35, 66
Ignition, Battery	96
Ignition Coil	97
Ignition Control	21
Ignition Plugs... ..	33, 99
Ignition Switch	21, 25, 93
Ignition, Timing	98
Instruction Class, Bentley	III
Jack, Portable Wheel	76
Joints, Universal	35, 69
Lamps, Head	102
Lighting Control	25, 93
Lubricating Oils and Greases Recommended	29
Lubrication, Centralised Chassis	37
Lubrication, Engine	29, 41
Lubrication, Gearbox	29, 32, 36, 67
Lubrication, Periodic... ..	29
Lubrication, Rear Axle	30, 33, 36, 69
Lubrication, Wheel Bearings	76
Micro-switch	100
Missing Fire	104
Motor, Servo	64
Motor, Starter... ..	34, 99
Oil in Engine, Quantity of	30
Oil in Gearbox	29
Oil Level Indicator, Engine	45
Oil Pressure	45
Oil Relief Valve	43
Oil Relief Valve, Dismantling	43
Oil Pump, Chassis	39
Oil System, Engine	41
Oil Temperature	46
Oils Recommended for Bentley Cars	29
Output Regulator, Dynamo... ..	91
Overheating	84
Pivots, Steering	73
Plugs, Standard Settings for	33, 99
Propeller Shaft Sliding Joint	35, 69

	PAGE
Pump, Engine Oil	42
Pumps, Fuel	48, 101
Pump, Coolant	83
Radiator, Draining	26, 86
Radiator Mounting	85
Radiator Thermostat... ..	26, 84
Radiator, Coolant Level in	26, 31, 85
Rear Axle, Quantity of Oil... ..	30
Replacing a Headlamp Bulb	104
Road Springs, Lubrication of	38, 75
Road Wheels, Balancing	79
Rocker Shaft	44
Rockers, Valve	44
Service Facilities	16
Servo Motor, Adjustment of	64
Shock Dampers, Hydraulic	24, 30, 34, 72, 74
Side Lamps	104
Slow Running... ..	55
Snow Tyres	26
Snow, Use of Chains for Driving on	27
Spark Gaps, Standard	33, 99
Spring Shackles, Lubrication of	38, 75
Springs, Road... ..	38, 75
Stabiliser, Front	73
Starter Motor	34, 99
Starter Motor Brushes	100
Starter Motor Connections	100
Starter Motor, Failure of Operation of	106
Starter Motor Lubrication	34, 99
Starter Motor Switch	100
Starter Motor, Use of	100
Starting, Control Settings for	21
Starting the Engine	21
Steering Box, Oiling	30, 33, 71
Steering Joints	73
Steering Pivots	73
Storage of Car	109
Strainer, Chassis Oil Pump	39
Suspension, Independent Front	72
Switchbox	93